

Security switch located in hole



SYSTEM RESET

Light sensor adjustment

To remove the ALC circuit box:

- 1) Shut the power to the box by flipping the 2A fuse.
- 2) Remove the small 3 pin power connector.
- 3) Remove the large 24 pin main connector.
- 4) Remove the 4 screws which secure the box to the enclosure.

Reverse the above to reinstall the box.

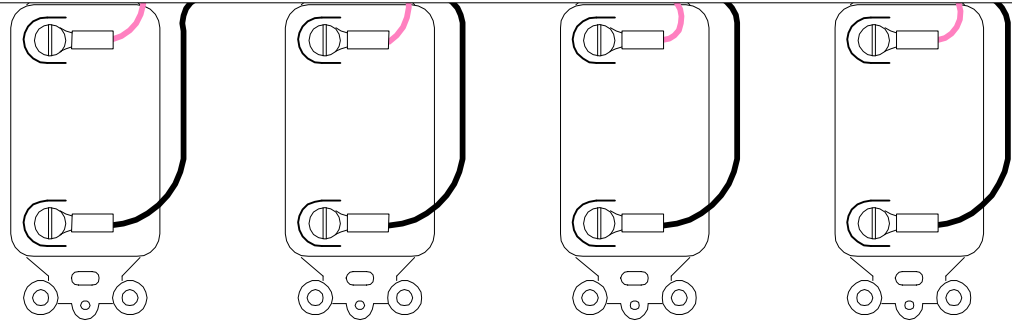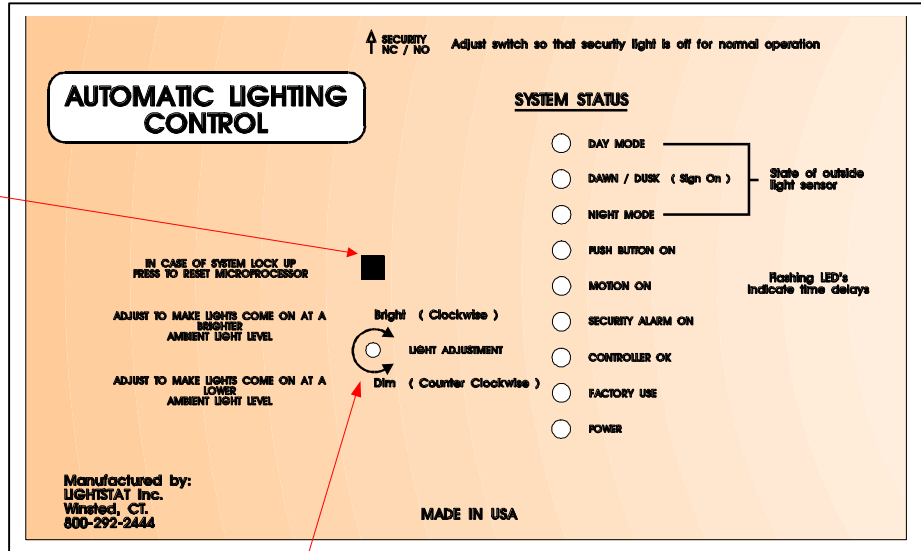

TYPE 1

